




## CBR600FX-FY DOWNPIPES



- **PACKING LIST:**
- **4X DOWNPIPES**
- **1X COLLECTOR**
- **4X CYLINDER PORT GASKETS**
- **1X CLAMP**
- **1X LINK PIPE**
- **1X CARBON GASKET**
- **4X COLLECTOR SPRINGS**
- **1X TUBE OF SILICON SEALANT**

- **Fitting Instructions**
- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove fairing panels.**
- **Remove existing exhaust system.**
- **Clean the cylinder ports of old gasket material, dirt and carbon deposits.**
- **Fit new gaskets, holding in place with a small amount of silicon.**
- **Attach number 1 and 4 downpipes finger tight and the collector.**

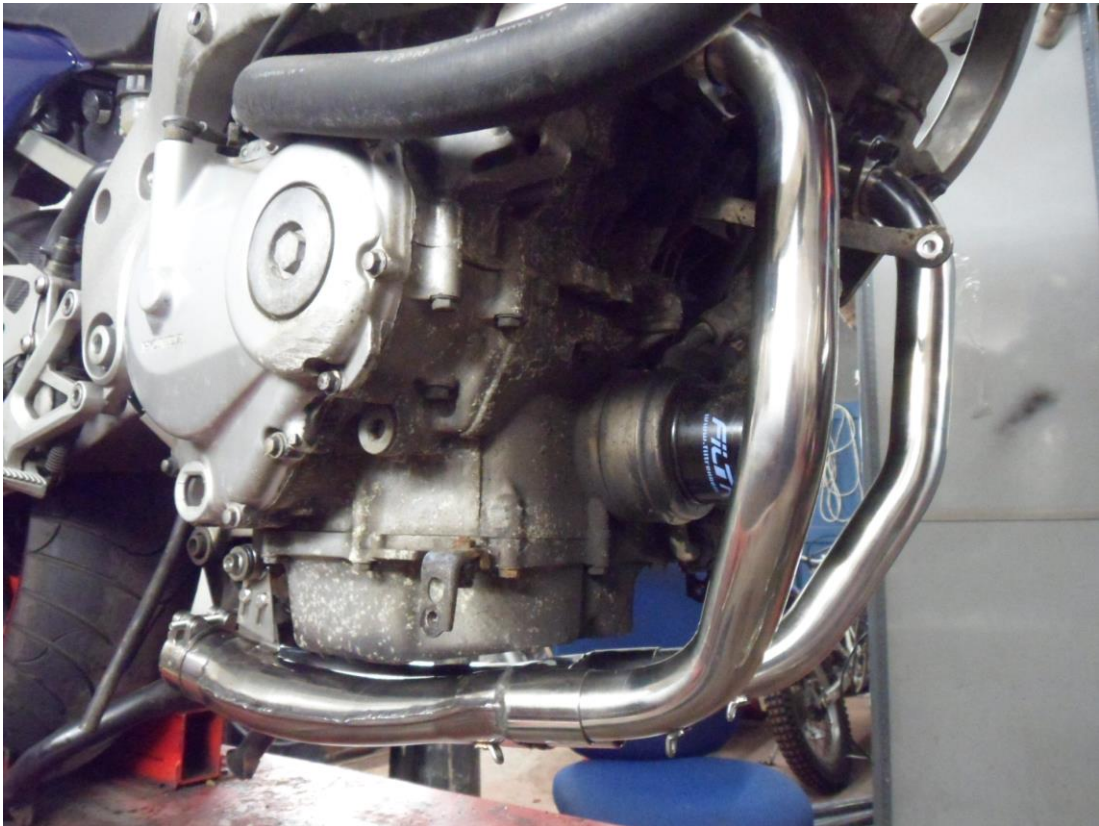

- Now fit number 2 and 3 downpipes.



- Fit the clamp and insert the link pipe on to the collector.



- Fit the OEM silencer with clamp on to the link pipe.
- Temporarily fit the fairing panels to check for clearance.



- Starting from the front, working rearwards tighten all clamps and fasteners.
- Attach the collector springs.
- Start the engine and check for leaks.
- After your first ride out, check all fasteners for tightness.