



CBR600 FH-FL DOWN PIPES



Packing List:

- 1X SET OF DOWN PIPES AND COLLECTOR**
- 1X CLAMP**
- 1X CARBON GASKET**
- 4X CYLINDER PORT GASKETS**
- 4X COLLECTOR SPRINGS**
- 1X TUBE OF SEALANT**

Fitting Instructions

We strongly advise that this product is fitted by a qualified motorcycle mechanic.

Please check packing list before you start.

Always fit new gaskets & apply high temperature silicon sealant to all slip fit joints.

Secure motorcycle on level ground using paddock stand. Recommended!

Remove fairing panels and standard exhaust.

Remove the old gaskets and clean the exhaust ports of dirt, corrosion and carbon deposits.

Insert new gaskets into exhaust ports, using a small amount of silicone to hold in place.

- Fit pipes 2 and 3 loosely into cylinder head and attach collector.




- Insert pipes 1 and 4 into collector and into the cylinder head.



- **Fit lower mounting bolt and fully tighten.**



- **Tighten the cylinder head nuts and attach the springs.**

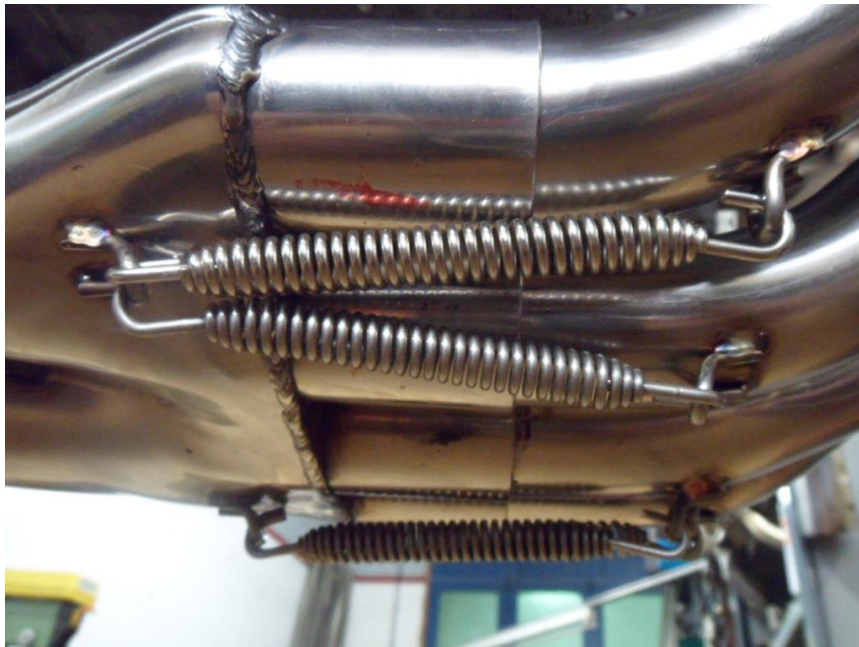

- Refit the standard silencer, start the engine and check for any leaks.
- Refit fairing panels and ensure there is sufficient clearance to the collector.

