



TRIUMPH STREET TRIPLE 675

PR2518 FITMENT

Packing List:

1X LINK PIPE
2X CLAMPS
1X SILENCER OF CHOICE AND STRAP
1X CARBON GASKET
1X MOUNTING BRACKET
1X 45MM CAP SCREW
1X 40MM CAP SCREW
2X M8 WASHERS
1X M8 NYLOC NUT

1.

- **Fitting Instructions**
- *We advise that this product is fitted by an experienced motorcycle mechanic.*
- *Please check packing list before you start.*
- *Secure motorcycle on level ground using a paddock stand. Recommended!*
- *Remove standard exhaust.*
- *Clean collector pipe of old gasket material, dirt and carbon deposits.*

2.

- *Insert new carbon gasket inside the slotted end of link pipe.*
- *Fit clamp on to link pipe and insert it on to the collector.*



- *Loosely fit the mid mount.*



3.

- *Replace pillion footrest pivot pin with the 45mm cap screw.*




- *And fit the mounting bracket.*



4.

- *Fit silencer with clamp on to the link pipe and fit the strap around silencer and to the bracket.*

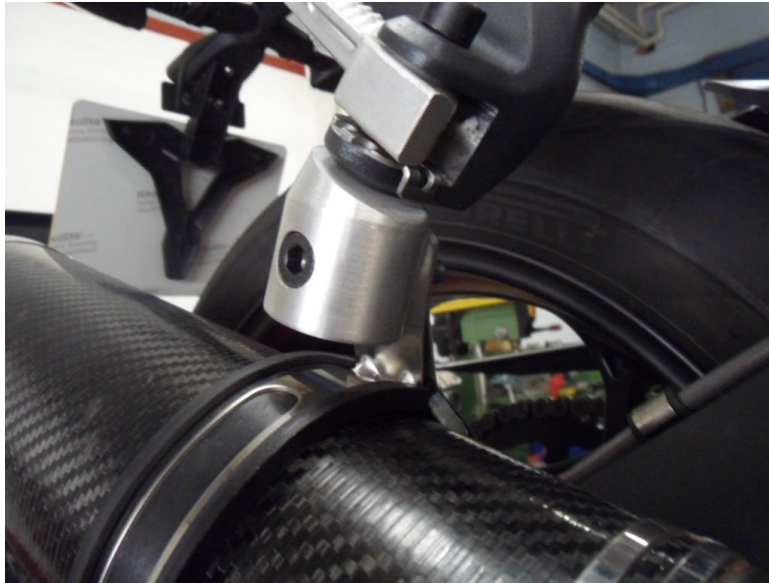

- *Starting from the front, working rearwards tighten all clamps and fasteners.*
- *Start the engine and check for leaks.*
- *After your first ride out, check all fasteners for tightness, especially the baffle bolt.*