




HONDA BROS / HAWK



- **PACKING LIST:**
- **1X DUEL CONNECTOR PIPE**
- **1X LINKPIPE**
- **2X CARBON GASKETS**
- **4X CLAMPS**
- **1X SILENCER AND STRAP WITH RUBBER INSERT**
- **1X MOUNTING BRACKET**
- **2X M6 CAP SCREWS**
- **2X M6 WASHERS**
- **1X M8 CAP SCREW**
- **1X M8 NYLOC NUT**
- **2X M8 WASHERS**

- **Fitting Instructions:**
- We advise that this product is fitted by an experienced motorcycle mechanic.
- Please check packing list before you start.
- Secure motorcycle on level ground using a paddock stand. Recommended!
- Remove standard silencer.
- Clean the down pipes of old gasket material, dirt and carbon deposits.
- Insert the new carbon gaskets.
- Fit the clamps and insert the connector on to the down pipes.

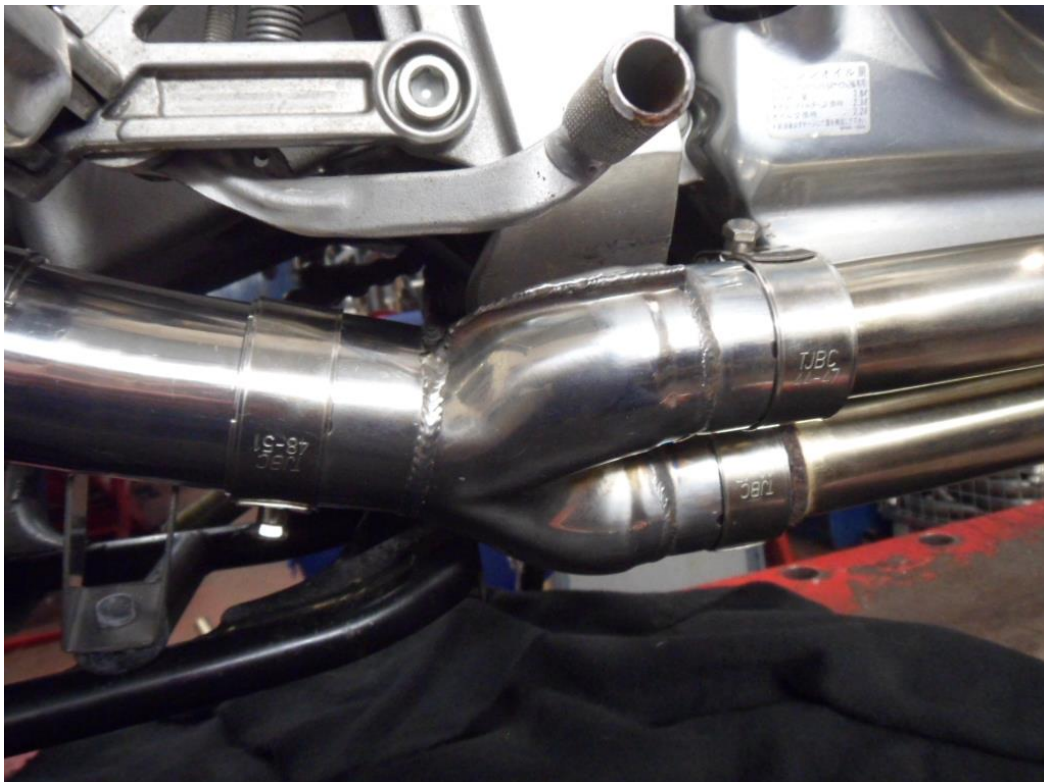

- Remove the wire clamp.



- **And replace with the mounting bracket.**



- **Fit the silencer with clamp on to the link pipe and fit the strap around the silencer and to the bracket.**



- **Starting from the front, working rearwards tighten all clamps and fasteners.**
- **Start the engine and check for leaks.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**