



KAWASAKI VULCAN S 650



PACKING LIST:

- **1X SET OF HEADER PIPES**
- **2X CYLINDER PORT GASKETS**
- **1X SILENCER BRACKET**
- **1X SILENCER OF CHOICE**
- **1X ABS WIRE HEAT SHIELD**
- **MOUNTING HARDWARE**


- **Fitting Instructions**
- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove outer side panel**



- **Remove inner side panel**



- **Disconnect sensor plug and remove standard exhaust.**

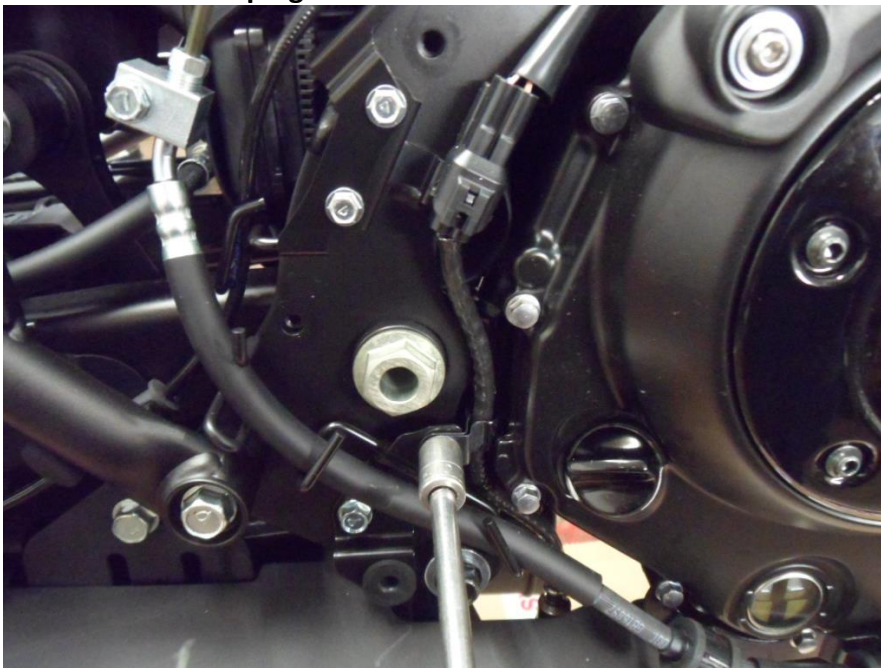

- Clean cylinder ports of old gasket material, dirt and carbon deposits.
- Fit new port gaskets
- Fit the sensor to the collector



- **Fit the header pipes**



- **Fit the bracket to the silencer.**



- Fit the silencer to the header pipe outlet, attaching the bracket to the frame.



- Attach the ABS wire heat shield on to the swing arm.



- Starting from the front, working rearwards tighten all clamps and fasteners.
- Start the engine and check for leaks.
- After your first ride out, check all fasteners for tightness, especially the baffle bolt.