


KTM690 LINK PIPE




- PACKING LIST:
- 1X LINK PIPE
- 1X SILENCER AND STRAP WITH RUBBER INSERT
- 1X SPACER
- MOUNTING HARDWARE
- 1X TUBE OF SILICON SEALANT

- Fitting Instructions
- We advise that this product is fitted by an experienced motorcycle mechanic.
- Please check packing list before you start.
- Secure motorcycle on level ground using a paddock stand. Recommended!
- Remove standard exhaust.
- Fit the clamp with the new cap screw and insert the pipe on to the collector.

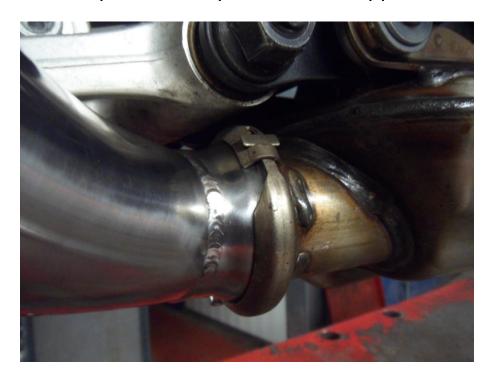

• Fit the spacer.

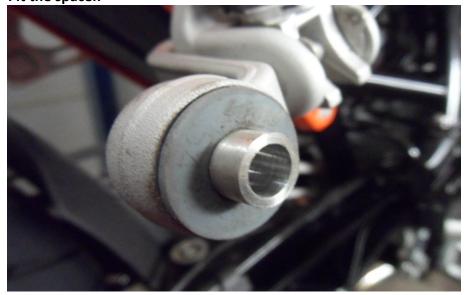

• Fit the silencer with clamp on to the link pipe and fit the strap around the silencer and to the bracket.



- Starting from the front, working rearwards tighten all clamps and fasteners.
- Start the engine and check for leaks.
- After your first ride out, check all fasteners for tightness, especially the baffle bolt.