

## **Z900 2017**



- PACKING LIST:
- 1X DOWN PIPE SET
- 4X CYLINDER PORT GASKETS
- 4X COLLECTOR SPRINGS
- 3X CLAMPS
- 1X SILENCER AND STRAP WITH RUBBER INSERT
- 1X MOUNTING BRACKET
- 2X SOLID MOUNT SPACERS
- MOUNTING HARDWARE
- 1X TUBE OF SILICON SEALANT

- Fitting Instructions
- We advise that this product is fitted by an experienced motorcycle mechanic.
- Please check packing list before you start.
- Secure motorcycle on level ground using a paddock stand. Recommended!
- Remove existing exhaust.
- Clean cylinder head ports of old gasket material, dirt and carbon deposits.
- Fit new cylinder port gaskets and the header pipes 1 and 4 finger tight.



- Attach the collector.
- Fit the lambda sensor (if used).



• Fit header pipes 2 and 3 finger tight.




• Fit the clamp and insert the link pipe on to the collector attaching to the frame.



• Remove the OEM rubber bushes.



And replace with solid mount spacers.

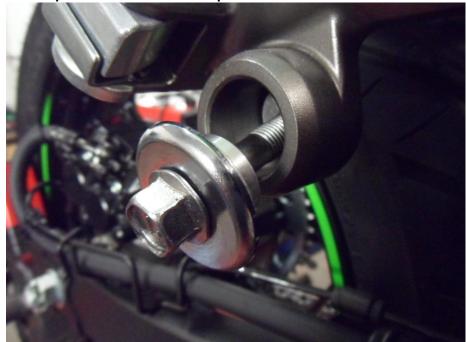

• Fit the silencer with clamp on to the link pipe and fit the strap around the silencer and to the bracket.



- Starting from the front, working rearwards tighten all clamps and fasteners.
- Start the engine and check for leaks.
- After your first ride out, check all fasteners for tightness, especially the baffle bolt.