


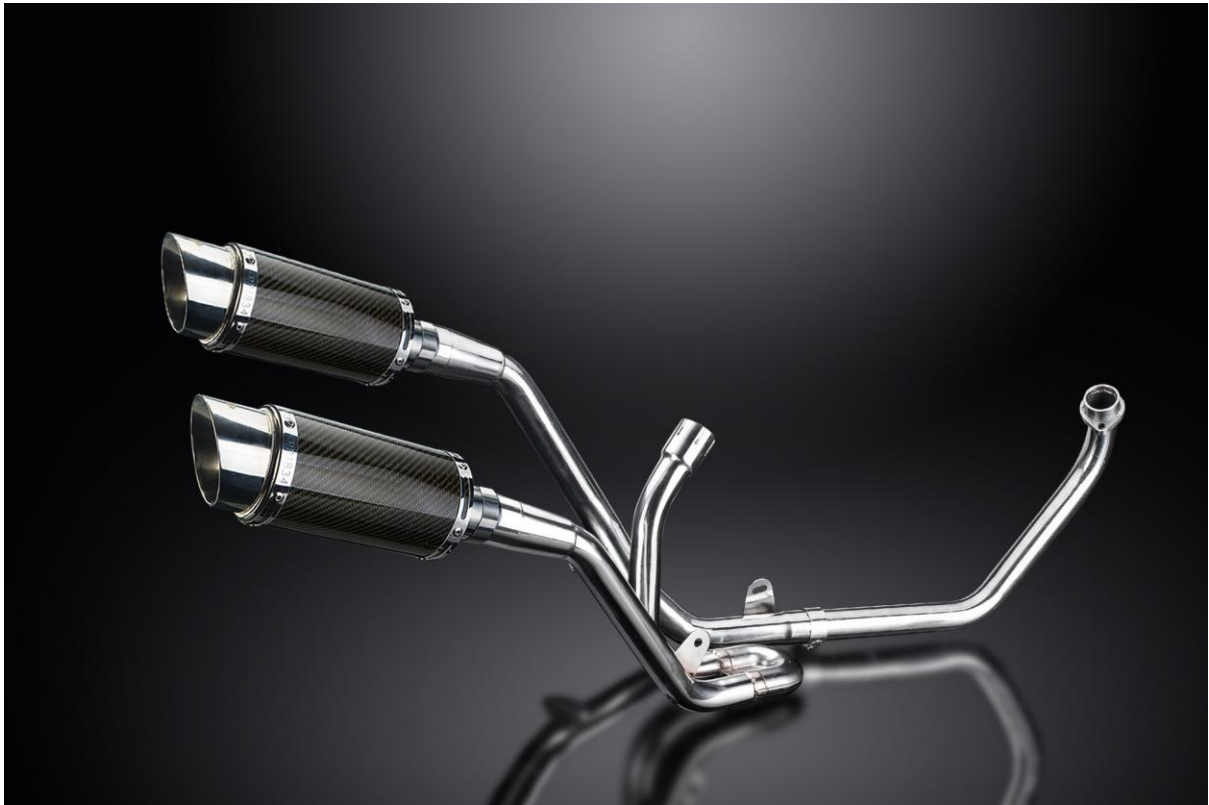

SV650 98-02 TWIN SILENCER



- **PACKING LIST:**
- **1X LINK PIPE SET**
- **1X FRONT DOWNPIPE**
- **4X CLAMPS**
- **2X SILENCERS AND STRAPS WITH RUBBER INSERTS**
- **2X MOUNTING BRACKETS**
- **4X SPACERS**
- **MOUNTING HARDWARE**
- **1X TUBE OF SILICON SEALANT**

- **Fitting Instructions**

- We advise that this product is fitted by an experienced motorcycle mechanic.
- Please check packing list before you start.
- Secure motorcycle on level ground using a paddock stand. Recommended!
- Remove standard exhaust.
- Clean the rear collector pipe of old gasket material, dirt and carbon deposits.
- Fit the clamp and insert the R/H link pipe on to the collector and mount to the frame.



- Fit the front downpipe finger tight.



- Fit the L/H link pipe to the downpipe and mount to the frame.



- Remove the pillion footrest brackets and re fit with the silencer mounts and spacers.



- Fit the silencers with clamps on to the link pipes and fit the straps around the silencers and to the brackets.



- Starting from the front, working rearwards tighten all clamps and fasteners.
- Start the engine and check for leaks.
- After your first ride out, check all fasteners for tightness, especially the baffle bolts.