



**SUZUKI GSXR600/750 K1 K2
K3 K4 K5**



PR2318 FITMENT


1.

- **PACKING LIST:**
- **1X LINKPIPE**
- **2X CLAMPS**
- **1X SILENCER AND STRAP**

2.

- **Fitting Instructions**

- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove standard exhaust by cutting the pipe 50mm from the weld bead.**

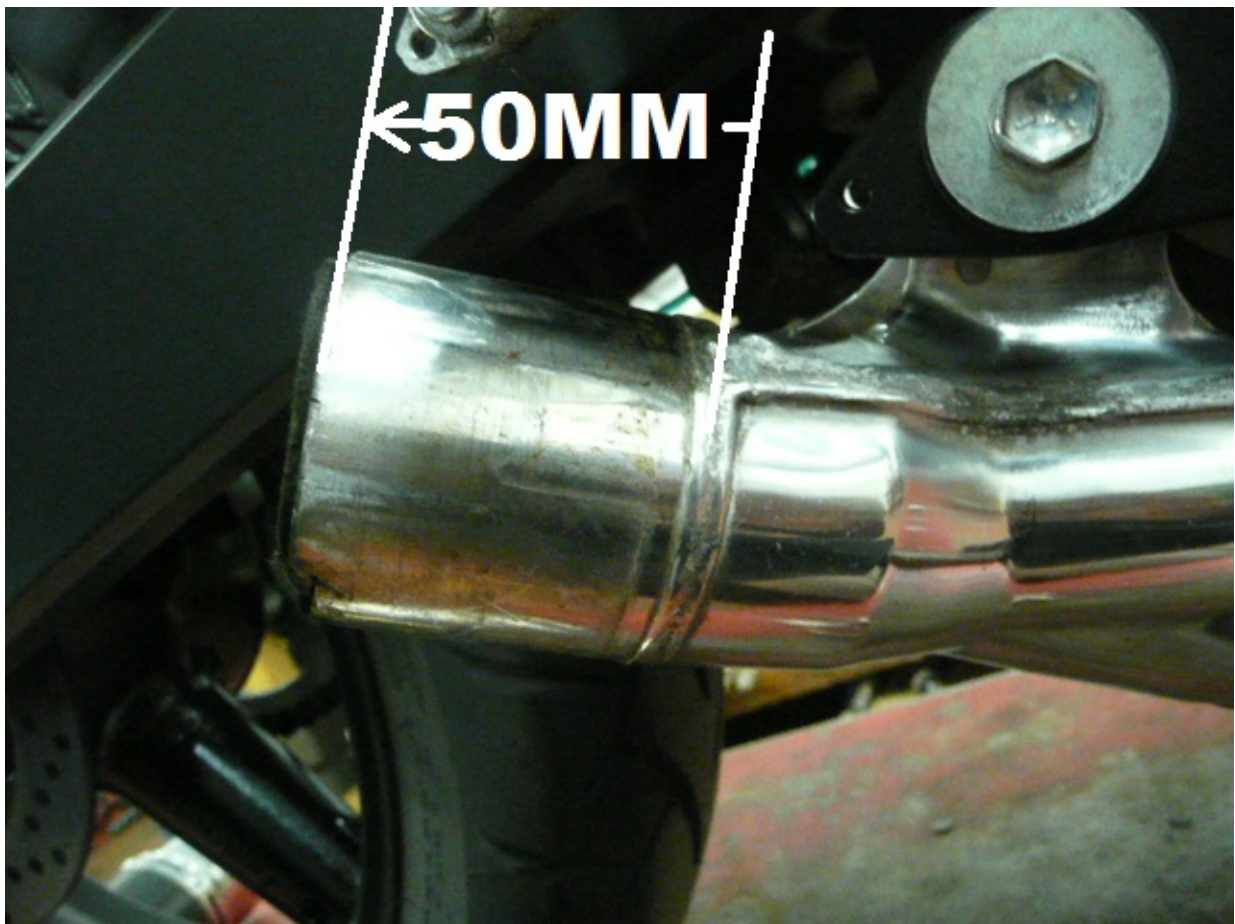

- **De-burr the end of collector pipe**

3.

- **Fit clamp and insert the pipe on to the collector.**



4.

- **Fit silencer with clamp on to the link pipe and fit the strap around the silencer and to the bracket.**



- **Starting from the front, working rearwards tighten all clamps and fasteners.**
- **Start the engine and check for leaks.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**