




## VFR750FL-FP HI-LEVEL



**PACKING LIST:**  
**1X LINKPIPE**  
**1X CLAMP**  
**1X SILENCER AND STRAP**  
**1X MOUNTING BRACKET**  
**3X M8x 20MM CAP SCREWS**  
**1X M8 NYLOC NUT**  
**4X M8 WASHERS**


- **Fitting Instructions**
- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove standard exhaust.**
- **Remove seat cowl.**
- **Offer up the bracket and mark the frame with a pencil.**

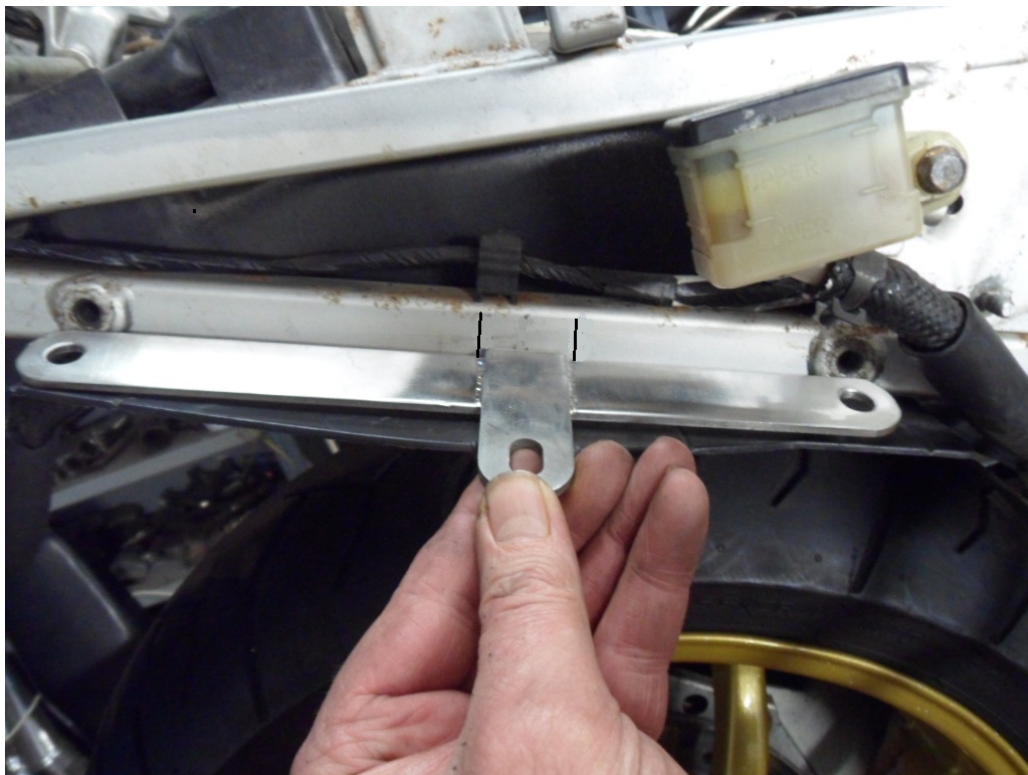

- **Make a cut in the plastic.**



- **Fit the bracket.**

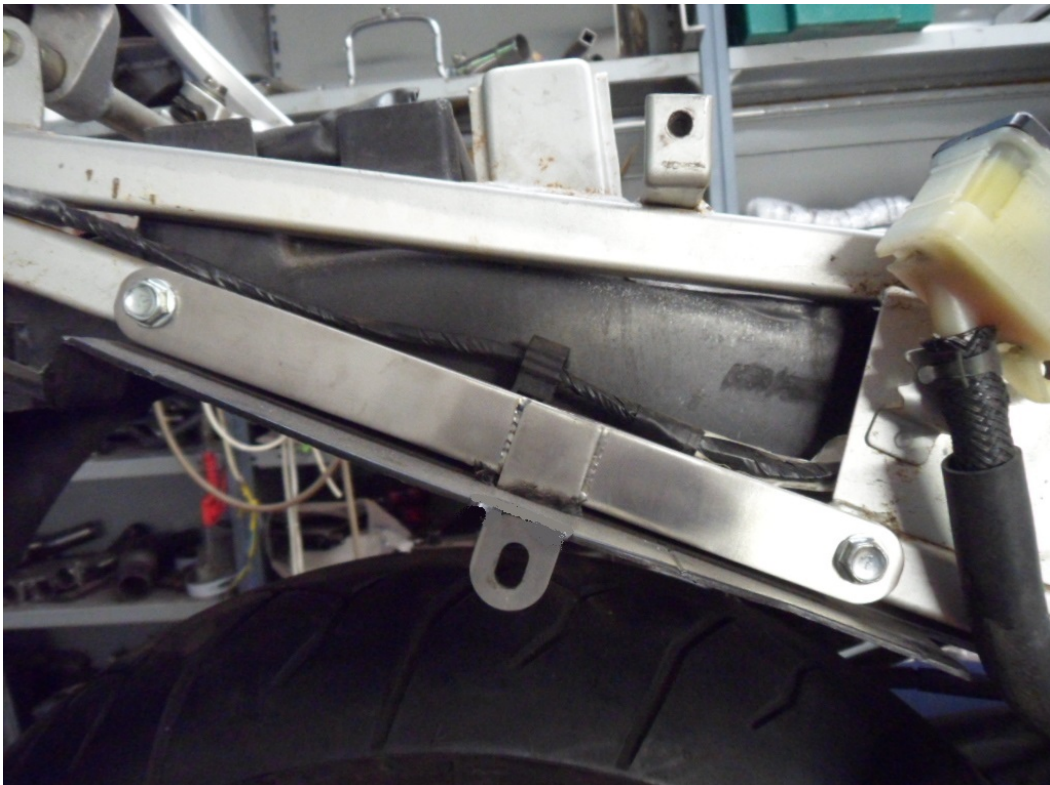



- **Fit the link pipe to the OEM collector loosely at this moment.**
- **Fit the silencer with clamp on to the link pipe and fit the strap around the silencer and to the bracket.**
- **Twist and/or turn the link pipe to obtain correct alignment.**



- **Starting from the front, working rearwards tighten all clamps and fasteners.**
- **Start the engine and check for leaks.**
- **Refit seat cowl.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**

