



## **YAMAHA FZ6**



### **PR2116 FITMENT**

1.

**PACKING LIST:**  
**1X LINKPIPE**  
**3X CLAMPS**  
**2X SILENCERS AND STRAPS**  
**1X MOUNTING BRACKET**  
**2X 30MM CAP SCREWS**  
**2X 20MM CAP SCREWS**  
**4X NYLOC NUTS**

2.

- **Fitting Instructions**

- **We advise that this product is fitted by an experienced motorcycle mechanic.**
- **Please check packing list before you start.**
- **Secure motorcycle on level ground using a paddock stand. Recommended!**
- **Remove standard exhaust.**
- **Clean collector pipe of old gasket material, dirt and carbon deposits.**
- **Attach mounting bracket.**




3.

- **Fit clamp and insert the pipe on to the collector.**



- **Fit silencers with clamps on to the link pipe and fit the strap around silencers and to the bracket.**

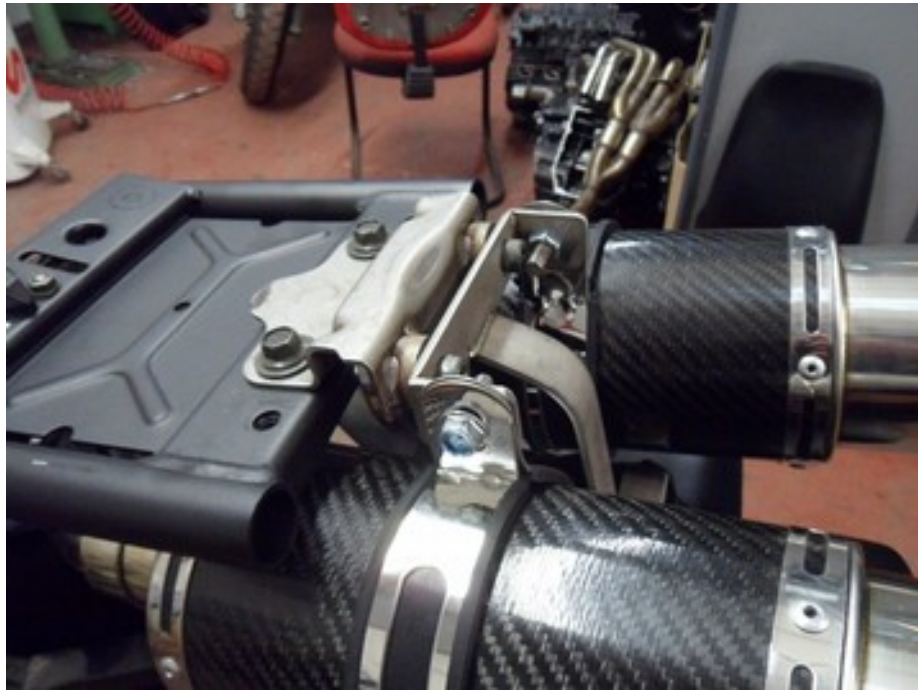

4.

- **Starting from the front, working rearwards tighten all clamps and fasteners.**
- **Start the engine and check for leaks.**
- **After your first ride out, check all fasteners for tightness, especially the baffle bolt.**

