



Z1000 2010/14 LINK PIPES

Z1000 2015/16 LINK PIPES



Packing List:

2X SILENCERS OF CHOICE AND STRAPS
2X LINK PIPES PR2071
2X CLAMPS 52mm/55mm PR2065
1X EXHAUST SHIELD SPECIAL CLAMP
2X DROPDOWN BRACKETS PR1433
2X CYLINDRICAL SPACERS PR2312
2X M8 X 40MM CAP SCREWS
2X M8 NYLOC NUTS
4X M8 WASHERS

Fitting Instructions.


We strongly advise that this product is fitted by a qualified motorcycle mechanic.

Please check packing list before you start.

*Secure motorcycle on level ground using paddock stand. Recommended!
Remove seats, panels and standard exhausts as necessary.
Clean collector pipes of old gasket material, dirt and carbon deposits.*

Remove original right hand collector clamp and keep safe.

Flatten the small tang on the outlet and fit the special clamp as shown below.

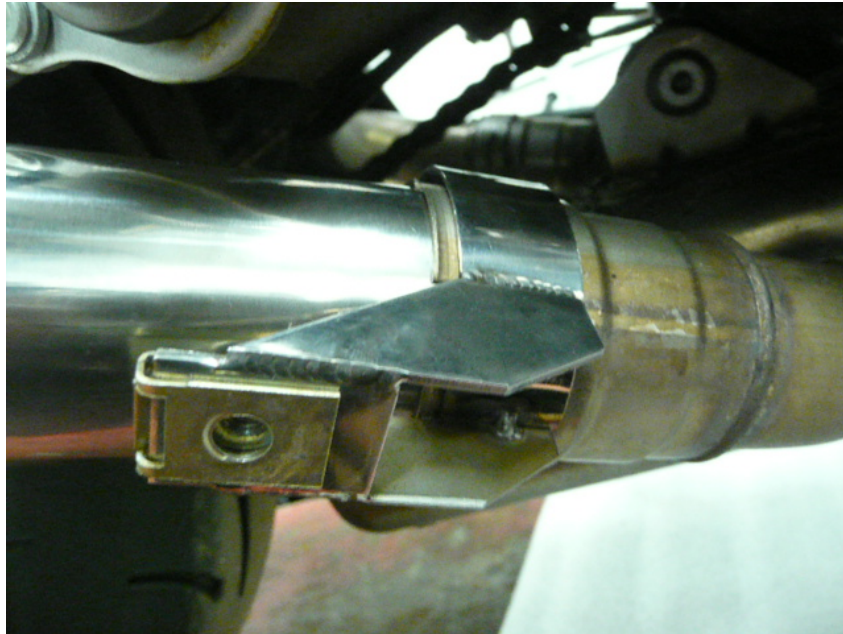

*Insert the longest link pipe into R.H collector.
Nip up bolt, not too tight for now just to support the pipe.*

Attach bracket, spacer, silencer and strap in shown sequence.



Fit the L/H side and then rotate the pipes to obtain alignment and clearance.

Starting from the front working rearwards tighten all clamps and

fasteners.

Start engine and check for leaks.

Replace panels, seats etc.

After your first ride out, check all fasteners for tightness, especially the baffle bolts.